


Safety Instructions for Troll wiring;

- If you are unsure of what you are doing, for your protection and the protection of your pin, you should have a qualified technician install these items for you.
- Turn power off before starting. Never install any parts under your pin without first turning off the power.
- **Always make sure all fuses are the correct amperage, voltage and type.** They are designed to prevent damage to your pin. Disregarding this can cause serious damage to your pin and yourself.
- The two original length screws **must** be used to hold the troll head to the troll target switch. The original screws (there are two) are about ¼ inch long. If they have been replaced with a longer screw (usually ½ inch) **do not use them!** Replace with shorter screws. Failure to do so can cause a short circuit situation inside the troll head.
- **Never** let the alligator clips touch each other or any other component except the tab intended.
- Be sure the alligator clips are securely connected to the light tabs.
- Be sure the rubber cover is pulled down as far as possible over the metal alligator clip.
- Spreading out the light tabs is an advisable safeguard. Moving them farther apart will help ensure they do not come in contact with each other.
- Use the wire ties provided to secure the troll wiring to the rest of the wiring. This will help prevent loose wires from getting caught and pulled off the light tabs.

THE LORD OF THE RINGS - PATHWAY OF THE DEAD RAMP INSTRUCTION SHEET

Included in this kit will be :

- 1 Lord of the Rings - Pathway of the Dead Ramp (Version 2.0)
- 1 Nickel plated Philips Screw
- 1 Brass plated Slotted Screw
- 1 Instruction Sheet

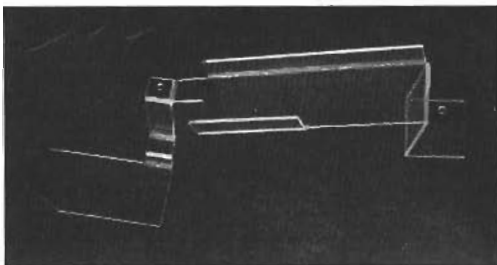

To install the ramp you need to do the following :

First, remove the screw located on the Arwen plastic near the front. Then attach the ramp by using the back screw hole to the existing screw you just removed. Next, fit the flat rectangular piece into the Gift of the Elves trough. You should now pull the ramp back until the front portion of the ramp is in line with the start of the Arwen plastic. (This will be just above the stand up white target). Now, secure the other screw hole using either of the supplied screws. By pulling the ramp into this position, you will have the correct angle which is 10 degrees (this measurement is taken with the ramp not installed) .

Mounting the ramp with the 2 screws is necessary to achieve the designed angle. The Z- Bend technique that was used to make the bends will prevent the ramp from being bent more than it is designed to. Do not bend the ramp further as your ramp might break at the bend areas.

If you have any questions, do not hesitate to contact us. We will work to rectify any problems you have.

David Eisner
PinWest
www.pinwest.ca
(Dec 21, 2006)